


Panasonic

DMP-BW500/750.

Operation Manual


This Blu-ray disc player has been modified to play discs from the following regions:

- Blu-ray regions A, B and C
- DVD regions: Regionfree (1-6) auto

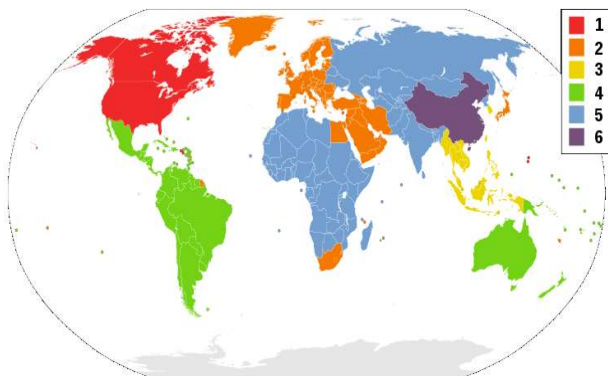

DVD regions

–

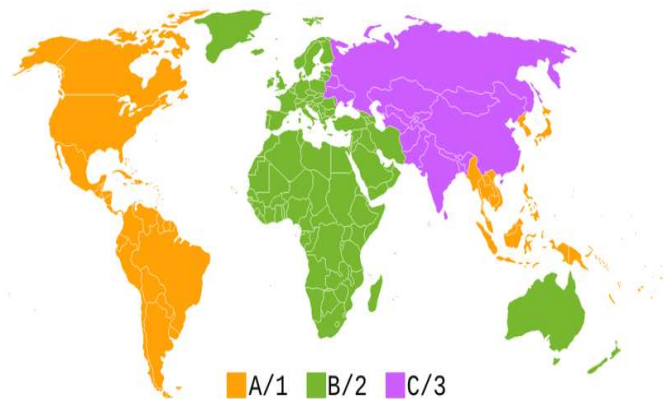

Blu-ray regions

Switching between the regions is done using the original remote of the BD player.

- Make sure your player is in standby (switched OFF with the remote).
After going down into standby. The player needs to rest another 60 seconds before pressing any button.
- Press button 1 on the remote for blu-ray region A, DVD regionfree (1-6) auto
- Press button 2 on the remote for blu-ray region B, DVD regionfree (1-6) auto
- Press button 3 on the remote for blu-ray region C, DVD regionfree (1-6) auto
- Switch on the player

The default setting after connecting the player to the mains is blu-ray region B, regionfree for DVD.

Please note that the player's Quick Start mode must remain OFF, in order for the modification to work.

