


Samsung

BD-P1580/1600/1620/3600


Operation Manual

This Sony Blu-Ray disc player has been modified to play discs from the following regions:

- Blu-ray regions A and B
- DVD regions 1 and 2

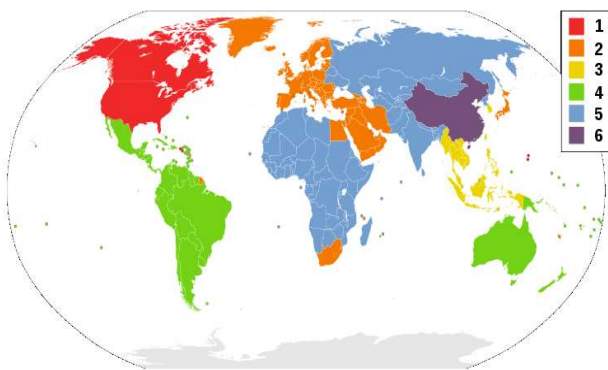

DVD regions

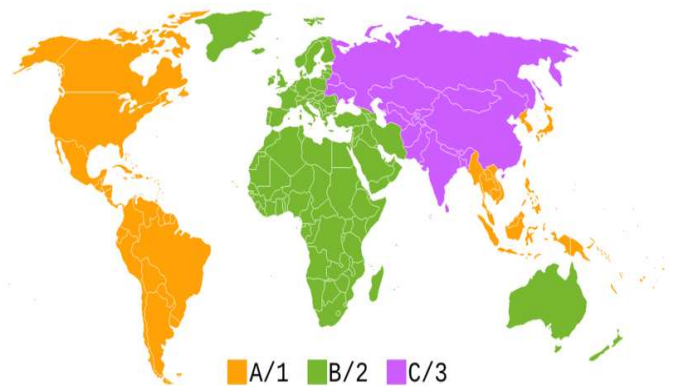

Blu-ray regions

Switching between these regions is done using the original remote of the BD player.

- Make sure your player is in standby (switched OFF with the remote)
- Press button 1 on the remote for blu-ray region A, DVD region 1
- Press button 2 on the remote for blu-ray region B, DVD region 2
- Switch on the player

The default setting after connecting the player to the mains is blu-ray region B, region 2 DVD.

P.S.

You will have to set the TV, audio settings etc. in both regions.

