


SONY

BDP-S1100/3100/4100/5100


Operation Manual

This SONY Blu-Ray disc player has been modified to play discs from the following regions:

- Blu-ray regions A, B and C (Manually Switchable).
- DVD regions: 1-6 + regionfree (automatic).

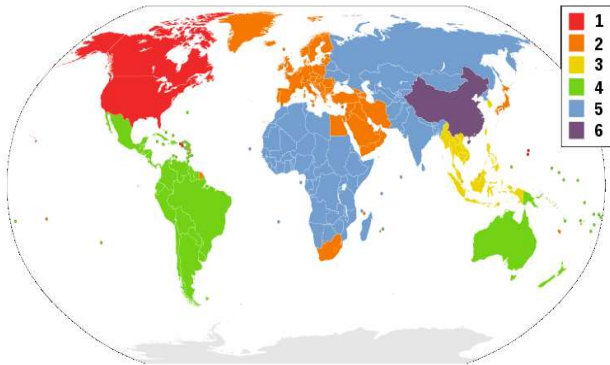

DVD regions

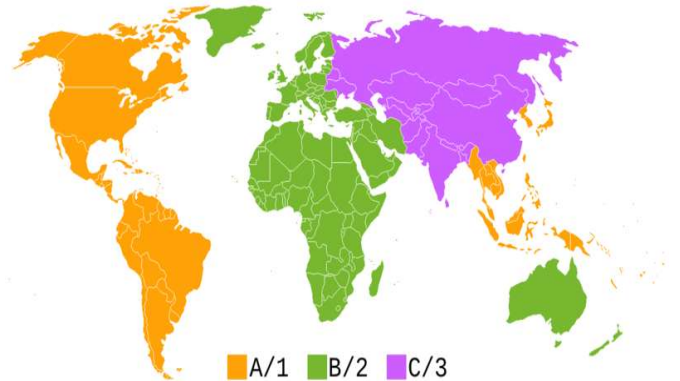

Blu-ray regions

Switching between the regions is done using the original remote of the Sony player.

DVD regions are set automatically. You do not need to do anything



1=A, 2=B and 3=C Region.

To change Blu-ray region **PRESS** key **1-3** for Blu-ray region A, B or C.

To change Blu-Ray region, make sure your player is in stand-by. Press key 1-3 to set Blu-Ray region A, B or C. Please also make sure that the quick start option in the player's setup menu is set to "Off".

Um den Regionalcode für Bluray Discs zu verändern gehen Sie wie folgt vor: Schalten Sie das Gerät per Fernbedienung aus. Geben Sie jetzt den neuen Regionalcode ein, indem Sie entsprechende Taste "1" für Gebiet A, "2" für Gebiet B und "3" für Gebiet C. Nun schalten Sie das Gerät per Fernbedienung wieder ein. Es ist jetzt auf den entsprechenden Regionalcode eingestellt.

