


Sony

BDP-S5000ES/S350/S360/S550/ S560/S760/S370/S470/S570


Operation Manual

This Sony Blu-Ray disc player has been modified to play discs from the following regions:

- Blu-ray regions A and B
- DVD regions: Regionfree auto

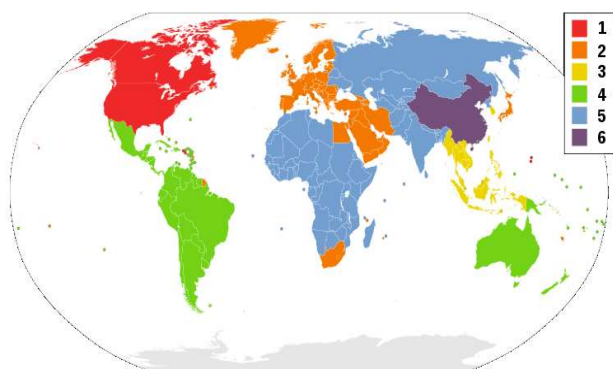

DVD regions

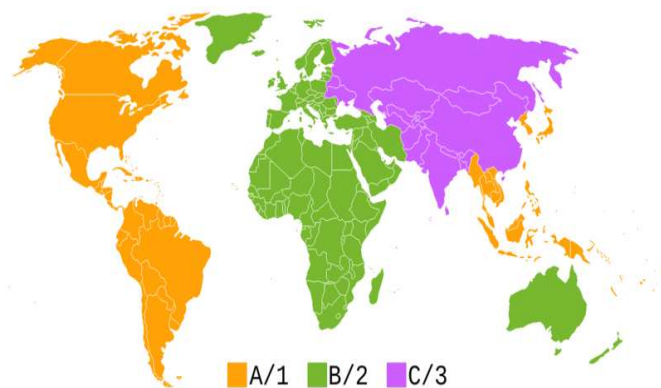

Blu-ray regions

Switching between these regions is done using the original remote of the BD player.

- Make sure your player is in standby (switched OFF with the remote)
- Press button 1 on the remote for blu-ray region A, DVD region 1
- Press button 2 on the remote for blu-ray region B, DVD regionfree
- Switch on the player

The default setting after connecting the player to the mains is blu-ray region B, regionfree for DVD.

P.S.

You will have to set the TV, audio settings etc. in both regions.

